

Commander™ User Manual

Version 1.1



Welcome

Commander is a device control program for the E-Stim Systems Series 2B. This program allows you to directly control your 2B from a PC via the USB connection.

Although it is written by E-Stim Systems, a lot of the development and ideas have come from its users i.e. you. we have an active forum where users can discuss all aspects of Commander, and the 2b, it can be found at

<http://www.e-stim.net/commander/>

Latest Version

For the latest version of Commander Software you will need to visit. Commander is Free

<http://www.e-stim.co.uk/commander/>

This software is currently supplied as a BETA version, so there will be possibly problems and odd errors. If you wish to report a bug then please visit the support forum.

Document Version

Version 1.1 12th July 2011

Copyright Notice

All images and text within this manual are ©E-Stim Systems Ltd 2007-2011

Commander EBox™, EBox 2B™ 2B™ Uplink™ and derivative terms are trademarks of E-Stim Systems Ltd.

All rights reserved. E & OE.

Index

Welcome.....	2
Latest Version.....	2
Document Version.....	2
Copyright Notice.....	2
Index.....	3
Quick Start Checklist.....	4
Installing Commander	5
Main Screen	6
Channel Controls	7
Off Button.....	7
Power Slider	7
Increase Button	7
Decrease Button	7
Channel Lock Button.....	7
Channel Level Display.....	7
Colour warnings.....	7
Over Level Warning.....	8
Channel Link.....	8
Channel Shutdown Control	8
Power Level Control	8
Power Level change warning.....	8
Mode Selector	9
Mode change warning	9
Sensation Sliders	10
Control Name	10
Value.....	10
Feel / Sensation Slider	10
Increase Button	10
Decrease Button	10
Status Bar	11
Timeouts	11
Commander Control Link.....	12
2B Link Control	13
To Connect.....	13
Menu System	14
Controls Menu	14
Presets Menu	14
High Power Warning	14
Mode Change Warning	14
Colours.....	14
Settings.....	14
Help Menu	15
About	15
Debug Log.....	15
Tool Tips.....	15
Colour Options.....	16
Settings	17
Power Slider Settings	17
Feel Control Settings	17
Keyboard Controls	18
Install USB drivers	19
Identifying the COM Port.....	19
Advanced Options	19

Quick Start Checklist

Before continuing you should read the manual to ensure you are familiar with all the functions of Commander and the interface. However to refresh your memory we have created a quick checklist.

- ✓ Install USB divers (Page 19)
- ✓ Ensure 2B is running the correct firmware.
Commander requires a minimum of Version 2.09
- ✓ Connect link cable to PC.
- ✓ Check which COM port it is using. (Page 19)
- ✓ Install Commander on PC. (Page 5)
- ✓ Run Commander.
- ✓ Enable Commander Control Link on 2B (Page 12)
- ✓ Set Com Port on Link Control & Enable. (Page 13)
- ✓ See if the 2B responds to Commander
- ✓ Done!!!!

Installing Commander

Firstly BEFORE installing Commander ensure you have installed the USB drivers (page 19) and connect the 2B Link cable.

If you already have a previous version of Commander installed you may need to un-install the previous version using the standard windows software removal tools.

Download latest version of commander from the website. This can be found at <http://www.e-stim.co.uk/commander/>

 
Right click and select 'save as' (Or 'save target as' depending on your browser)

This will download a .zip file to your PC.

Unzip the file.


Run setup.exe

You may get a publisher warning notice. Assuming you have downloaded Commander direct from our website this can safely be ignored.

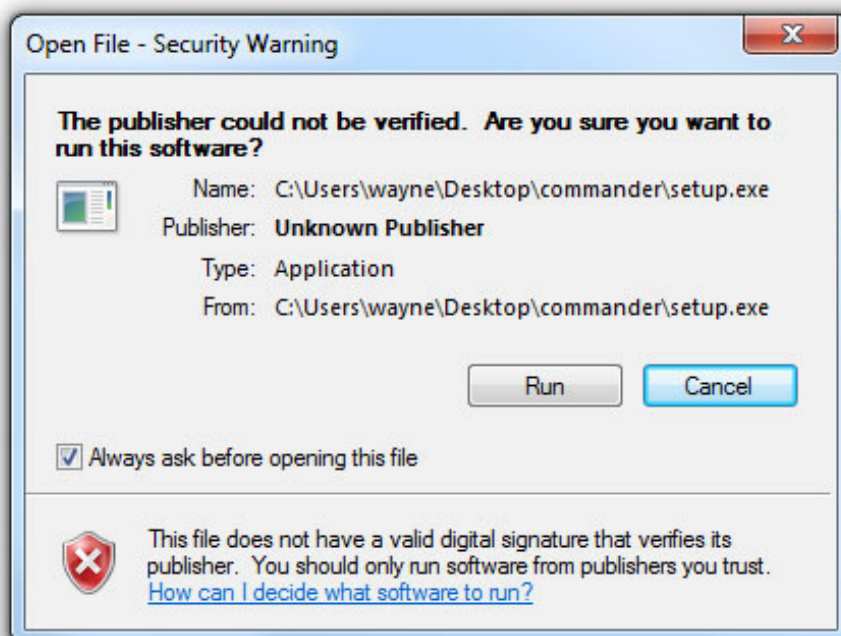


Commander will then install and run. The installer will check for prerequisites, and then offer to install them for you.

 If you have not connected the USB cable, or if the USB cable drivers have not been installed correctly you may get an error warning

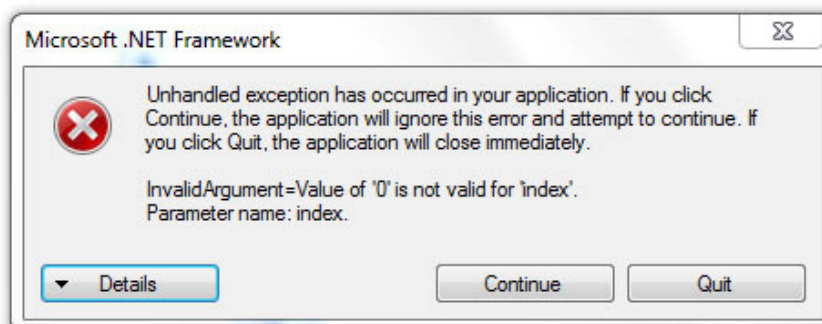

Press quit and connect the USB cable, and then try again. If everything has installed correctly you would be presented with the Main Screen. You have successfully installed Commander.

 Main Screen

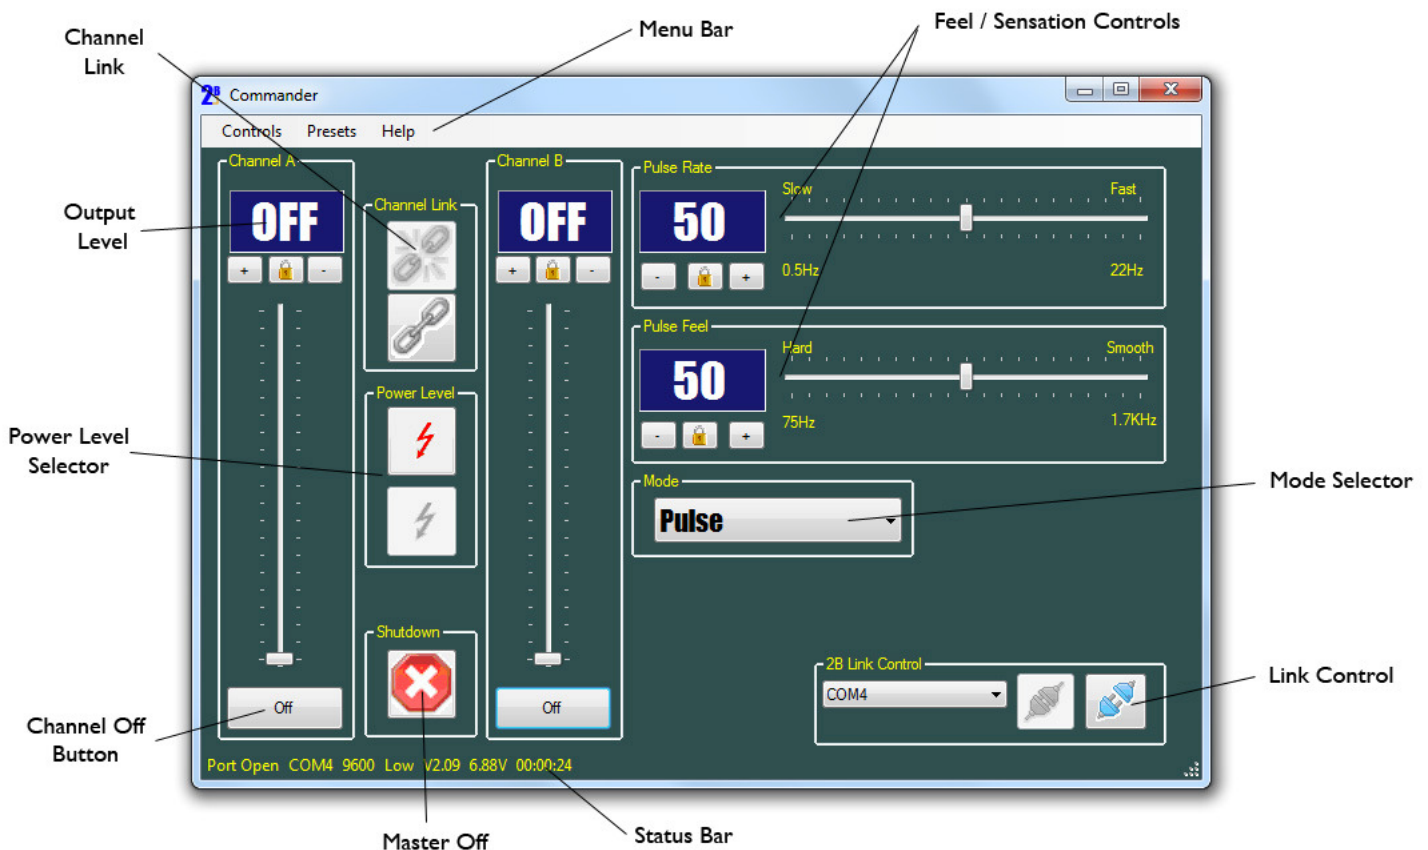

The Commander interface is designed to be simple and easy to use, with all on the main functions visible on the main screen and less frequently used options are hidden behind the menu and settings systems.

Channel Sliders control the options available on each output channel For more details see page 7.

Channel Link allows you to link both channels together for easier control. See Page 8 for more details.

The **Shutdown button** allows you to instantly cut the channels to zero with a single click, (Also operated via the ESC key on the keyboard.) For more details on the shutdown system see page 8.

The **Feel and sensation sliders** allow you to adjust the feel of the output. For more information see page 10.

 
The **Mode selector** gives you the option to change the mode your 2B is operating in. For more details see page 9.

A **Power level selector** allows you to switch the power setting of your 2B between LOW and HIGH. See page 8 for more details.

The **Link Control option** gives you control over the communications between the 2B and your PC. You need to enable the communication link between Commander and the 2B BEFORE any of the other controls will work. (Page 13)

Lastly the **Status Bar** at the bottom of the Commander Screen gives you up to date information about the communications link, the and the state of the 2B (battery level and firmware version), and the **menu bar** (at the top of the screen) gives you access to the less frequently used options and settings of the 2B. For more details on the status bar see page 11, and the Menu system see page 14.

Channel Controls

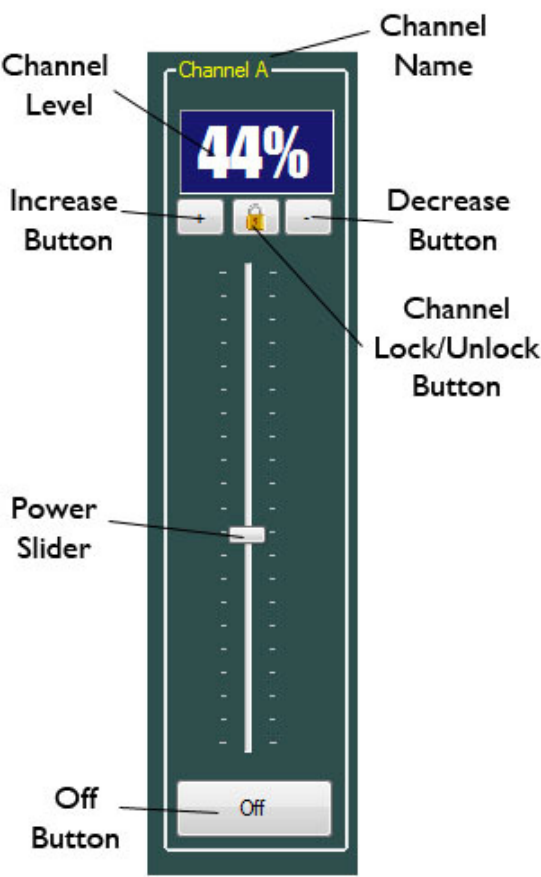

Two groups of controls are marked Channel A and Channel B control each output channel on the 2B. The are the PC version of the Channel Intensity controls on the 2B.
Starting from the bottom.

Off Button

Click the off button will immediately drop the Channel Level to Zero. Can also be activated from the keyboard by pressing the **Z** (For Channel A) or **X** (For Channel B) keys on the keyboard.

Power Slider

The power sliders are the main up down level control. The Slider can be dragged with the mouse, or clicked on above and below the slider. Dragging with the mouse will enable fact level changes, but these changes are only passed to the 2B when the control is released (Adjust on Drop). Clicking on the slider above the control will increase the output by a fixed amount. Clicking below the control will reduce the output by the same about. The exact amount can be adjusted via the Settings Menu

Increase Button

Increases the output by a fixed amount. The exact amount can be adjusted via the Settings Menu. Can also be triggered by pressing the **Q** (For channel A) and the **W** (For Channel B) Keys on the keyboard.

Decrease Button

Decreases the output by a fixed amount. The exact amount can be adjusted via the Settings Menu. Can also be triggered by pressing the **A** (For channel A) and the **S** (For Channel B) Keys on the keyboard.

Channel Lock Button

Locks the Channel Control. While the channel is locked only the Off button is active. Designed to prevent inadvertent changes occurring. If the Locked Padlock button is showing then the channel is unlocked and visa versa.

Channel Level Display

The output level. Varies from 0 'OFF' to 100% 'MAX'. or the users preset limit (See Settings Menu). If the

Colour warnings

By default the power sliders have a colour warning system. As you increase the value the colour of the text will change, from white to yellow to red.

Level	Colour
OFF to 69%	White
70 to 89%	Yellow
90 to 100%	Red

It is possible to override this system on the menu::settings screen as well as cause some interesting effects if the LCD font colours are changed to either red or yellow.

Over Level Warning

It is possible to set a limit to how high the Slider level can be set, and this is defined in the Settings Menu. If it is found to be impossible to raise the level above a certain point, and the PC beeps then the over level warning is probably in use.



Channel Link

The Channel Link control allows you to link both output Channel A and B together, allowing simpler one handed control. When the channel Link is in operation Channel A is marked as MASTER and Channel B is marked as SLAVE.

Adjustments of Channel A will be reflected in Channel B. So to give an example, If Channel A is at 20% and Channel B at 10%, moving Channel A to 35% will increase Channel B but the same level, i.e. to 25%.



Channel Shutdown Control

The shutdown control, situated between the power sliders will drop both channel outputs immediately. The shutdown control will override any channel locks and can also be accessed by pressing the Esc key on the keyboard

Power Level Control



Between the sliders is the power level control buttons. The 2B is capable of operating in two power settings

 
LOW Designed for general usage.

HIGH Designed for serious players.

Power Level change warning

If you change from Low to High Commander will warn you, that you are about to change to a higher setting. If you find this warning annoying then you can switch this option off in the Presets Menu.

Mode Selector

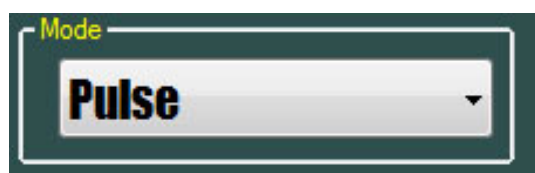

The mode selector control allows you to change the mode of the 2B from a list of available options. Not all 2B modes are available, depending on the version of Commander and the firmware of the 2B. To change a mode simply select the mode with the mouse.


Mode changes will reset all level settings.

Mode	Diagram	Adjustment	Select+Adjustment	Notes
Pulse		Pulse speed	Pulse Feel	Both channels pulse on and off
Bounce		Pulse speed	Pulse Feel	Channels pulse alternately.
Continuous		Pulse Feel	n/a	Channels are on continuously
A Split B Split		Pulse speed	Pulse Feel	The Split channel pulse, the other channel is on continuously
Wave			Speed of increase	The output level increases to the set limit and then drops to zero before repeating.
Waterfall			Speed of increase /decrease	The output level increases to the set limit and then decreases to zero before repeating.
Squeeze			Pulse speed	The pulse rate increased and then drops to slow.
Milk			Pulse speed	The pulse rate increased and then drops to slow. Channel B is off when Channel A is on and visa versa.
Throb		Range of Throb	n/a	Continuous mode with variable feel, rising from low to adjustment value and then dropping back to low.
Thrust		Range of Thrust	n/a	Continuous mode with variable feel, rising from low to adjustment value and then decreasing back to low.
Random		Amount of Randomness	Pulse Feel	Random pulsed output.
Step		Step Range	Pulse Feel	Stepped output
Training		Jump Range	Pulse Feel	Output jumps by level.

Mode change warning

If you change a mode Commander will warn you, than you are about to change a mode. If you find this warning annoying then you can switch this option off in the Presets Menu.

 Sensation Sliders

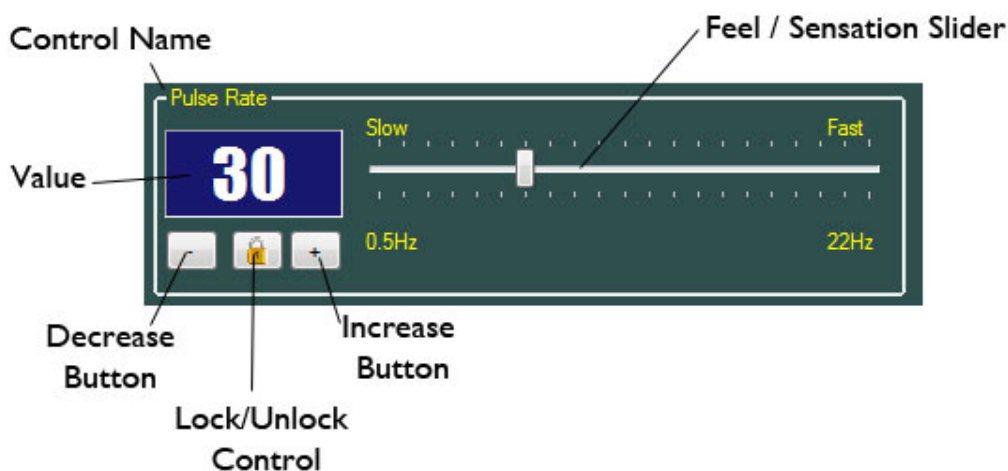

The sensation sliders allow you to adjust the feel and sensations produced by the 2B. They are the PC version of the Adjust and Select Button + Adjust Control on the 2B. As with the controls directly on the 2B, the sliders change function and availability depending on the mode selected.

Control Name

Informs you what the control actually does.

Value

Value of the control. Varies between 2 and 100, depending on the mode selected.

Feel / Sensation Slider

The feel/sensation slider adjusts the value of the control via the mouse. The slider can be dragged from side to side with the mouse, or clicked on to the left and right of the central control. Dragging with the mouse will enable fine level changes, but these changes are only passed to the 2B when the control is released (Adjust on Drop). Clicking on the slider to the left of the control will decrease the value by a fixed amount, clicking to the right of the control will increase the value by the same amount. The exact amount can be adjusted via the Settings Menu.

Increase Button


Increases the value by a fixed amount. The exact amount can be adjusted via the Settings Menu. Can also be triggered by pressing the **Cursor Up** (For the top slider) and the **Cursor Right** (For the bottom slider) Keys on the keyboard.

Decrease Button

Decreases the output by a fixed amount. The exact amount can be adjusted via the Settings Menu. Can also be triggered by pressing the **Cursor Down** (For the top slider) and the **Cursor Left** (For the bottom slider) Keys on the keyboard.

Status Bar

The status bar is the line of text at the bottom of the Commander interface. It gives current status information of both Commander and the 2B. The display below is from Commander connected to a 2B, your display may vary.

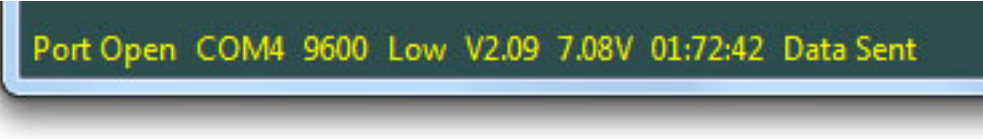


Port Open COM4 9600 Low V2.09 7.08V 01:72:42 Data Sent

Reading from left to right

Port Open	Indicates the status of the 2B Link.
COM4	The Link is connected to COM4, this value will depend on your exact machine configuration
9600	The Link is running at a speed of 9600 baud
Low	The 2B is set to LOW power
V2.09	The Firmware version reported by the 2B
7.10V	The current battery voltage
01:71:15	System timer (used for future expansion)
Data Sent	Indicates the data status

Timeouts

 You may also see 'Data Sent' flash up from time to time, this indicates that Commander has sent data to the 2B. Whenever that data is received and correctly interpreted, then the Data Sent message is cleared. If the 2B does not respond in time, then you will eventually get a timeout message.

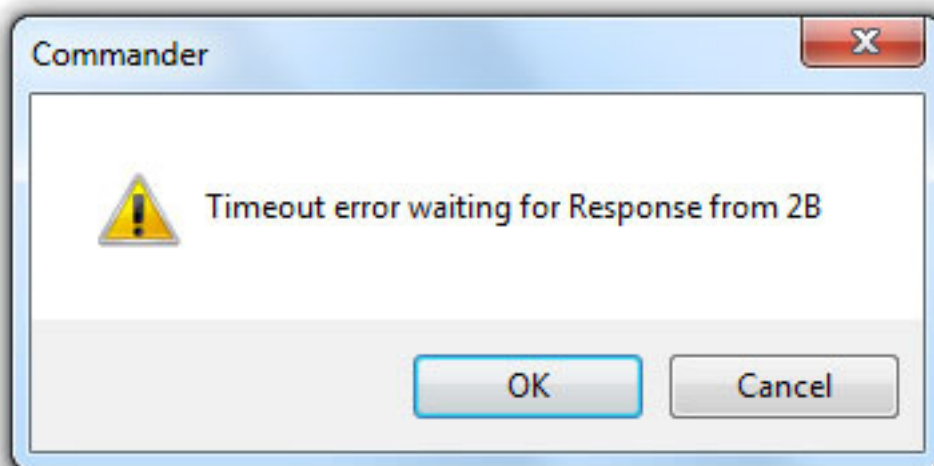

Reasons for timeout messages are varied but can be due to failure of the link, failure of the 2B or failure of the PC.

Commander Control Link

In order for the Commander software running on your PC to communicate with your 2B you need to enable the link software on your 2B to listen for commands via the link cable.

You need to be running at least Version 2.09 on the firmware to operate correctly with Commander. For more details on firmware upgrades visit <http://www.e-stim.co.uk/link/>

1. Switch 2B on.
2. Select commander mode in a similar way to changing any other mode, by double clicking the select button, and twiddling the adjust knob to get

```
2 2  C o m m a n d e r  
c o n t r o l   t o   c h a n g
```

3. Now Press Select

```
C o m m a n d e r : O f f  
A : O F F           B : O F F
```

4. And twiddle the adjust knob to switch commander mode on

```
C o m m a n d e r : O n  
A : O F F           B : O F F
```

5. Now press the select button to enable Commander.

The display on the 2B should now show a right pointing arrow, indicating that the Commander Control link is now available.

```
P u l s e           5 0 : 5 0  
A : O F F   → L ■   B : O F F
```

If you power off your 2B, the Commander Control Link will still be available when you turn the 2B back on.

To cancel the Commander Control Link follow the procedure above but select **Commander:Off** or perform a factory reset.

Connect cable to 2B and PC

run Commander on PC

2B Link Control



The link control tells commander which COM port to use to communicate with the link cable, as well as giving you control over the actual connection. Before running Commander you must ensure the link cable is connected, otherwise the COM port may not be recognised by Commander

The link Control has 3 elements, a drop down box to select the COM port, and two connect/disconnect buttons. If a button is greyed out, then it is generally not available.

 
In the picture above the connect button is greyed out as the PC is connected to the COM port (in this case COM4).

To Connect

Firstly ensure that the cable is connected to your PC and the 2B, the drivers have been correctly installed, and the 2B has the Commander Control Link enabled (right pointing arrow on bottom link of 2B screen)

1. select the Com Port
2. Press the Connect Button

The status line on the bottom of the commander interface screen should now change to show

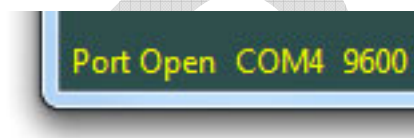


This indicates the Port is Open, on COM4 and is running at a speed of 9600. You might see a different COM port depending on the configuration of your PC

Sending Test Commands


Menu System

 The Menu systems allows you to control aspects of Commander that you might not need on a day to day basis, but still need to access.

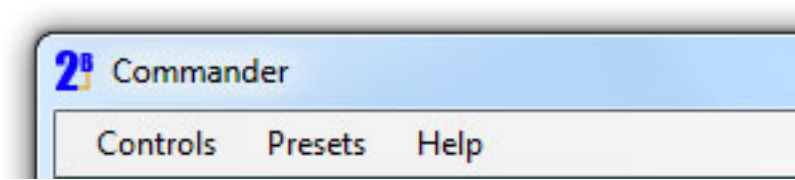

Controls Menu

 - Defaults** Sets all control settings to default levels.
- Exit** Exits Commander.

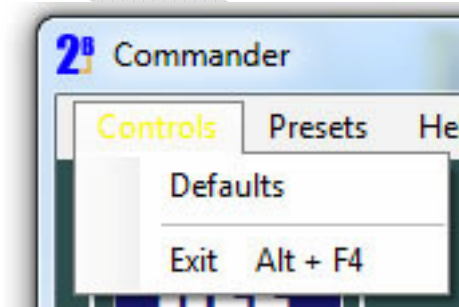

Presets Menu

The Presets menu offers you control over warnings, and some of the less obvious settings.

High Power Warning

Allows you to turn off the automatic warning about switching to high power. Click to toggle

Mode Change Warning

Allows you to turn off the automatic warning which occurs when you change mode. Click to toggle

 
Colours

Allows you to change the colours of the Commander Interface (see page 15)

Settings


Allows you to change some of the settings of Commander Interface (See Page 16)

Presets are saved on exit.

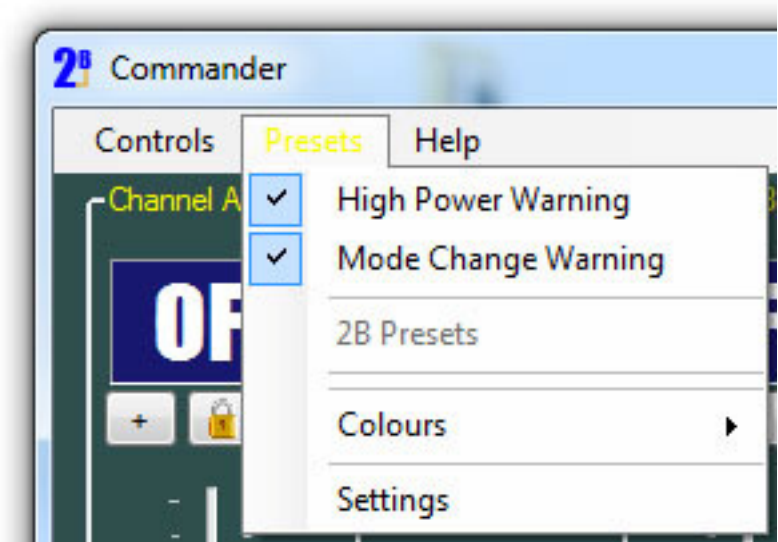

Help Menu

 The help System

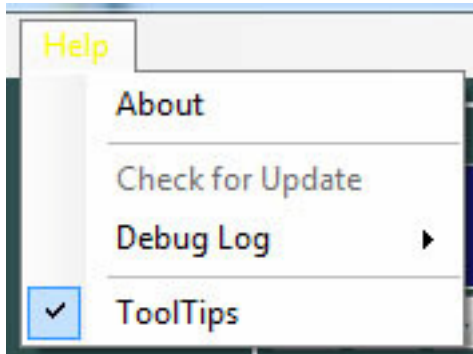


About

Pops up a screen giving version information about Commander


Debug Log

 Tool Tips

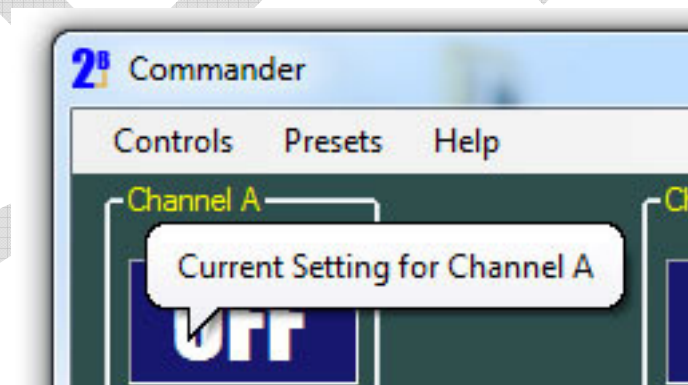

If tool tips are enabled then when you hover the mouse over a control you should see a bubble pop up with a little information about the control. This is a useful system for beginners, but for the advanced user it can become annoying, so it is possible to switch it off.

 Colour Options

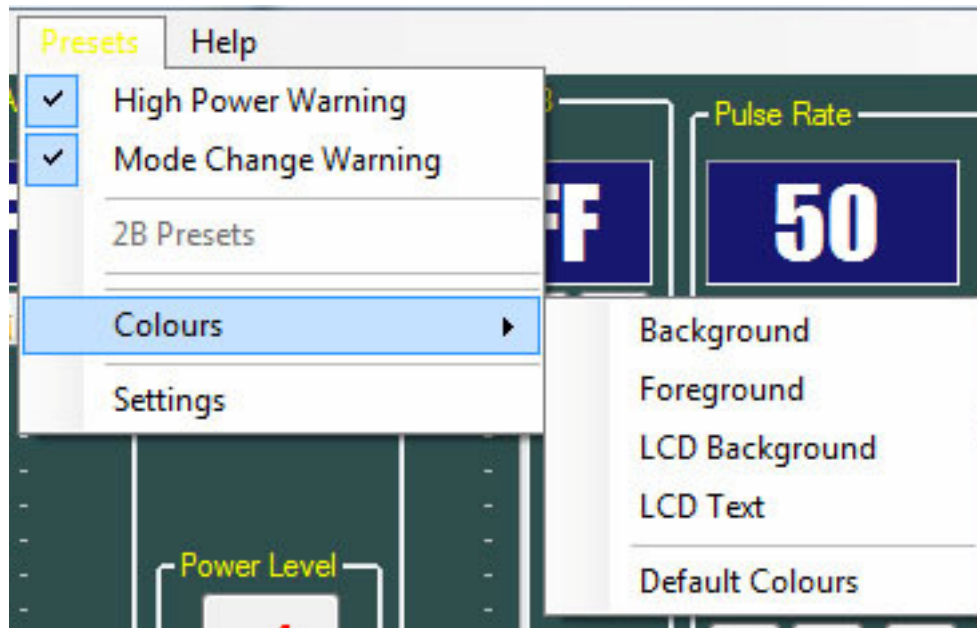


It is possible to change the colours on the Commander interface, to suit your personal tastes.

Background	The Colour of the background of Commander
Foreground	The colour of the main text
LCD Background	The Colour of the background of the value displays on Commander (default colour is blue). Be careful if you select white, red or yellow as a background as this will cause issues when the colour warning system is being used. (Yellow on Yellow just doesn't work well!!)
LCD Text	The Colour of the text in the value displays on Commander. If colour warnings are switched on, these will override the colours set here.
Default Colours	Resets all the colours to system defaults Background ; Dark Green Foreground ; Yellow LCD Background : Dark Blue LCD Foreground : White

Colour changes are saved by Commander, so when you re-run Commander your colours will be as you have set them.

 Settings

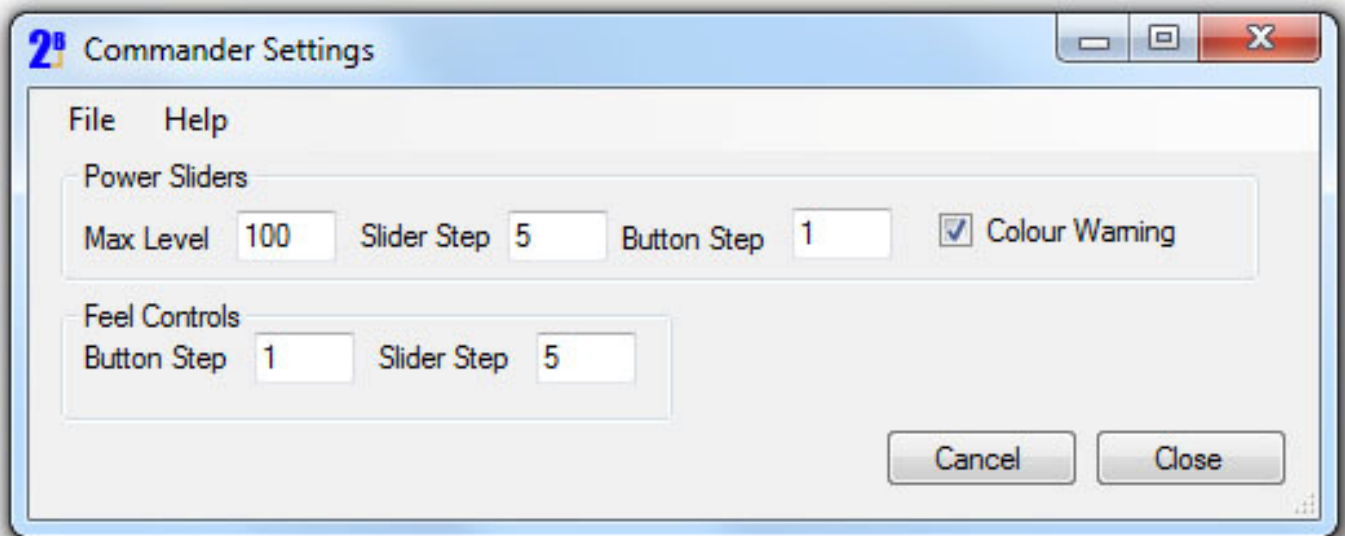


Power Slider Settings


Max Level	The maximum level it is possible to set the power slider to.
Slider Step	The amount the slider will increase or decrease when the power slider is clicked.
Button Step	The amount the value will increase or decrease when the slider button, or the relevant keyboard key is pressed.
Colour Warning	Enable or disable the colour warning system

Feel Control Settings

Slider Step	The amount the slider will increase or decrease when the feel slider is clicked.
Button Step	The amount the value will increase or decrease when the slider button, or the relevant keyboard key is pressed.

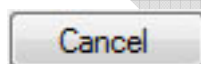 

 
The cancel button allows you to exit the setting screen, without saving any changes.

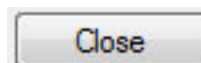


The Close button exits the settings screen and saves the settings. The saved settings persist even when Commander is shutdown.

Keyboard Controls

 As well as the mouse, it is possible to use the keyboard to control the 2B via Commander.

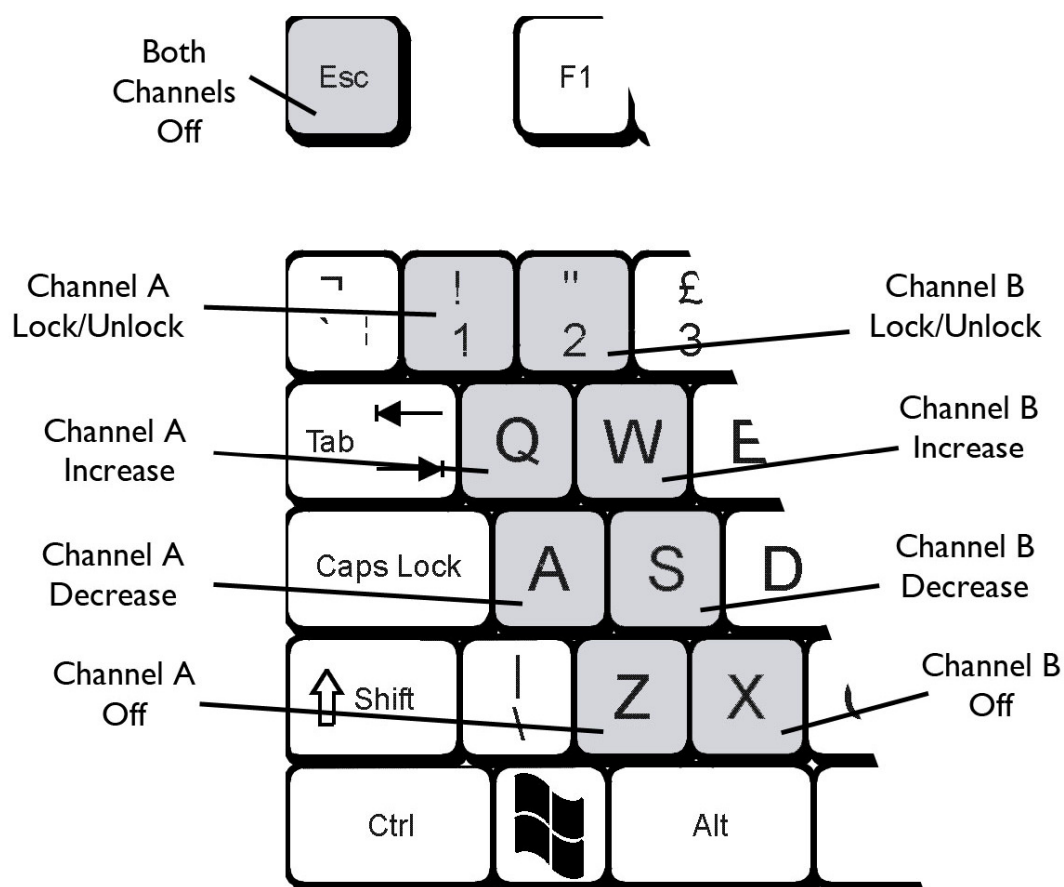

 The feel sliders also have similar controls around the cursor keys

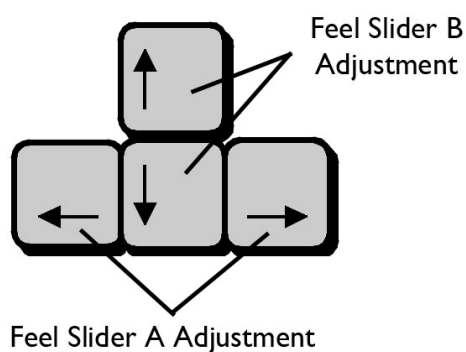

Install USB drivers

The USB driver allows your PC to talk to the electronics within the USB cable itself. Once the drivers are installed you should not have to re-install them again.

Install USB drivers. These can be loaded from the CD or downloaded from <http://www.e-stim.co.uk/link/index.php#drivers>

 
The drivers are available in both executable or zipped '.zip' formats. Modern windows computers can cope with both variations.

Simply right click on the file link, select 'save Target as' to save to a suitable place on your computer and then double click on the executable (.exe) file. The USB drivers should then install.

Now connect the PC Link cable to a spare USB port. You should see Windows recognise it and attempt to activate the drivers.

Identifying the COM Port

Now you need to see what COM port your computer has allocated to the cable. To do this you need to look at the device manager. Click on the windows start button, and then right click on 'Computer' and then select 'Manage'. This should open the Computer manager.

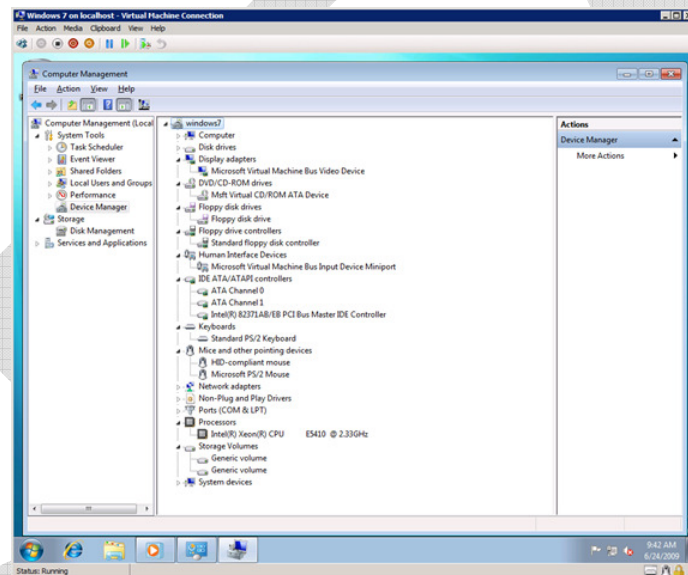

In the left hand column select device manager. In the right hand column look for PORTS (COM & LPT) under this you should see 'USB Serial Port (Com x)' Where x is a number. Note this down.

Advanced Options

You do not need to set any of the advanced options on the COM port (baud rate stop bits etc, as these are all controlled directly by the uplink program.